



BlackBerry Wireless Handheld™

Navigation Quick Tips

Action	Shortcut
--------	----------

In the Home screen

▪ To jump screens using shortcuts	Type the underlined shortcut keys to jump to a new screen
▪ To go to the list of saved messages	Press 'V'

In the Messages screen

▪ To jump to the t op of the list	Press 'T'
▪ To jump to the b ottom of the list	Press 'B'
▪ To go to the first u nread message	Press 'U'
▪ To go to an e rror message	Press 'E'
▪ To c reate a new item	Press 'C'
▪ To jump to the next message	Press 'N'
▪ To jump to the previous message	Press 'P'
▪ To delete old messages	Click on a date in the messages list and select "Delete Prior"; all messages prior so that date will be deleted
▪ To view all incoming messages	Press ALT + I
▪ To view all outgoing messages	Press ALT + O
▪ To go to the list of saved messages	Press 'V'
▪ To start a search for messages	Press 'S' to start a search in the Messages and Saved Messages screen
▪ To return to the last cursor position if you close a message before you've finished reading it	Press 'G'

In the Calendar Screen

▪ To jump to the n ext day, week or month	Press 'N'
▪ To jump to the p revious day, week or month	Press 'P'
▪ To s croll through Day, Week, Month and Agenda view	Press 'S'
▪ To go to T oday in Week and Month view and to go to the t op of the day in the Day view	Press 'T'
▪ To go to a specific date in any calendar screen	Press 'G'
▪ To switch to D ay view	Press 'D'
▪ To switch to W eek view	Press 'W'
▪ To switch to M onth view	Press 'M'
▪ To switch to A genda view	Press 'A'

SE0501H, TE0501H, CSE0501H v1.0



BlackBerry Wireless Handheld™

Navigation Quick Tips

Action	Shortcut
--------	----------

In the Address Book

▪ To shorten the list	Type the letters of a name to bring up all entries
▪ To search the Address Book	Type a contact's initials separated by a space

In the Options List

▪ To modify an option field	Hold down ALT while scrolling to cycle through available choices
▪ To jump to the next option	In the options list, press a letter to jump the cursor to the next option starting with that letter

General

▪ To select multiple items in a list	Press and hold the Shift key while scrolling
▪ To scroll horizontally in any text screen	Hold down ALT while scrolling to move the cursor horizontally across screen lines
▪ To jump directly to an item from the menu	Type the first letter of the item
▪ To delete a word on the RIM 950 Wireless Handheld™ or the RIM 850 Wireless Handheld™	Hold down ALT and press Backspace
▪ To select Yes , No or Cancel from a pop-up dialog box	Press 'Y', 'N' or 'C'
▪ To perform the most common task from your current location	Double-click (e.g. In the message list, double-clicking will open the highlighted message; while composing a new message, double-clicking will send)
▪ To scroll a screen at a time in the Messages, Address Book, Calendar, Tasks and Memo Pad	Press ALT while rolling the trackwheel
▪ To create a new item in Messages, Saved Messages, Calendar, or Tasks	Press 'C'
▪ To activate the LCD backlighting in the RIM 850™ and the RIM 950™	Press ALT three times
▪ To activate LCD backlighting in the RIM 857 Wireless Handheld™ and the RIM 957 Wireless Handheld™	Press the silver key

SE0501H, TE0501H, CSE0501H v1.0